



LOGIN		<b>1</b> <b>2</b> <b>3</b>	<b>5' inactivity = Automatic LOGOUT</b> <b>5' inattività = Automatico LOGOUT</b>	= OK
DMX MODE	DMX MODE SETTING		Enter the corresponding "IR" value ( see DMX chart Mode Column) to select the desired DMX Mode (e.g.: for IR=4press button 4). Immettere il valore "IR" corrispondente (vedi colonna DMX chart Mode) per selezionare la modalità DMX desiderata (es.: per IR=4 premere il pulsante 4).	= OK
	DMX ADDRESS SETTING		001~512	= OK
MASTER/SLAVE AUTOMATIC MODE * TO BE USED ONLY WITH DMX MODE #1	AUTOMATIC/MASTER		Green-Cyan-Blue-Magenta-Red-Yellow-White.	 5" → 10" → 20" → 40" 4 → 3 → 2 → 1 40" → 20" → 10" → 5" 4 → 3 → 2 → 1
	SLAVE FIXTURE SETTING		001	= OK
FIXED COLOR MODE * (RGB-RGBW-DW) TO BE USED ONLY WITH DMX MODE #1			<b>RGB</b> 1 = RED 2 = GREEN 3 = BLUE <b>DW</b> 5 = WARM WHITE 6 = COLD WHITE	0% → 100%
DIMMER MODE * (Monochromatic) TO BE USED ONLY WITH DMX MODE #1				100% → 0%
LOGOUT			<b>1</b>	
RESET			<b>7</b> <b>8</b> <b>9</b>	Reset to default settings

\* **WARNING !** in this mode, no other DMX control device must be present along the line.  
**ATTENZIONE !** in questa modalità non devono essere presenti altri controller DMX sulla linea.

Si raccomanda di usare batterie NUOVE AAA/LR03 alcaline e di sostituirle una volta all'anno.  
NON USARE BATTERIE RICARICABILI.  
Come controllare la carica delle batterie:  
Tenere premuto il tasto 5 e verificare che il LED sul telecomando rimanga acceso in modo continuo fino al rilascio del tasto.  
Se il LED lampeggia o rimane spento, le batterie utilizzate NON sono sufficientemente cariche: SOSTITUIRLE

You should only use NEW AAA/LR03 alkaline batteries that should be changed once a year.  
DO NOT USE RECHARGEABLE BATTERIES.  
How to check if the batteries are charged up:  
Press and hold button 5 and check that the LED on the remote control remains continuously lit until the button is released. If the LED flashes or stays off, the batteries used are NOT sufficiently charged: REPLACE THEM